




Wiring harness instructions

12V SWITCHED

1. PINK/BLACK WIRE

This wire is the trigger wire for the ignition relay in the fuse box of your CPW Harness.

- A. Connect to a 12V power source that is hot with the key on, and while the engine is cranking (Run & Start)

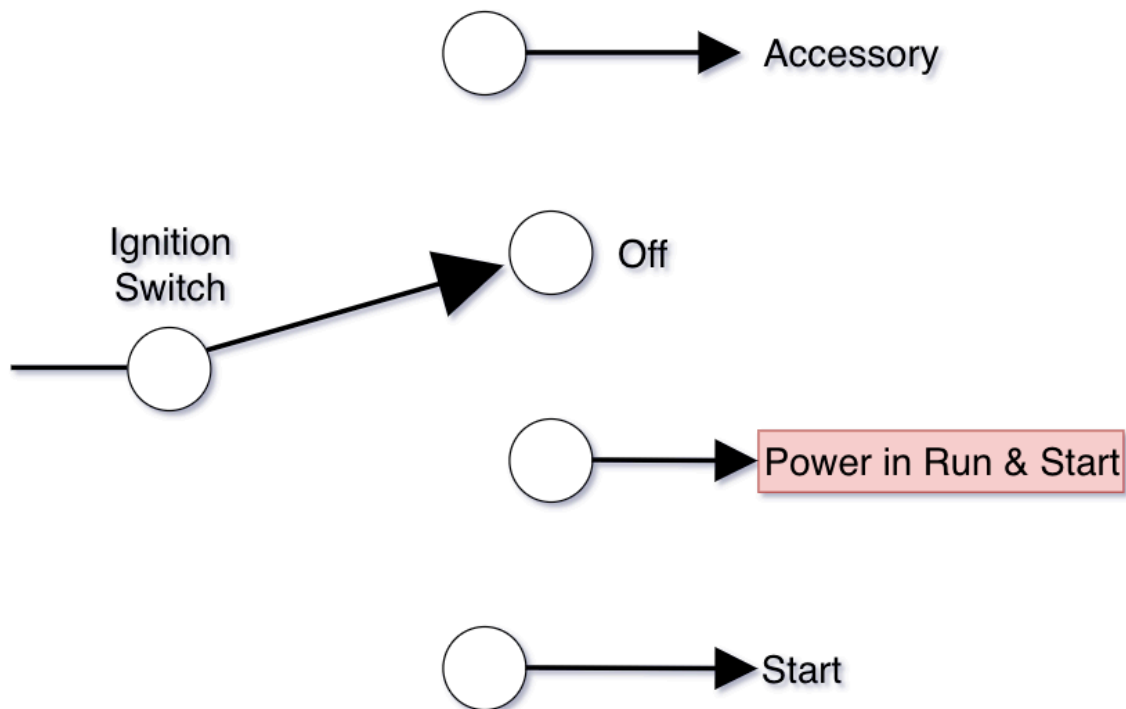

- B. When the 12V power wire is connected properly, all fuses in the fuse box should show voltage with the key in the “Run” as well as the “Start” or “Crank” Position.
- C. If voltage is not maintained at this circuit with the key in the “Start” position, the ECU and all other critical engine electronics will have no power when the starter engages, and the engine will not run.